

# Any Electronics Co.,Ltd.


# Ultrasonic sensor

# **UB1000-18GM-E4-V1**


Technical data	
General Specifications	
Sensing distance	701000mm
Adjustment range	901000mm
Unusable area	070mm
Standard target plate	100mm×100mm
Transducer frequency	About 255kHz
Response delay	About 125ms
Indicators/Operating means	S
LED blue	Power on
LED yellow	indication of the switching state
	Flashing:program function object detected
LED red	permanently red: Error Red, flashing:program
	function, object not detected
<b>Electrical specifications</b>	
Operating voltage U <sub>B</sub>	1030VDC,ripple10%ss
No-load supply current	≤20mA
Input	
Input type	1 TEACH-IN input Operating distance
	A1:-U <sub>B</sub> +1V,operating distanceA2:+6
	+ $U_B$ Input impedance: >4.7 $K\Omega$
	TEACH-IN programmable pulse :≥1S
Output	
Output type	1 switch output E4,NPN NO/NC,programmable
Rated operational current	200mA, short-circuit/overload protected
Default setting	Switching point A1:70mm Switching point A2: 800mm
Voltage drop	≤ 3V
Repeat accuracy	≤ 1%
Switching frequency f	≤4HZ
Range hysteresis H	1% of the set operating distance
Temperature influence	$\pm$ 1.5% of full-scale value
<b>Ambient conditions</b>	
Ambient temperature	- 2570°C(248343K)
Storage temperature	- 4085°C(233358K)
<b>Mechanical specifications</b>	
Protection grade	IP67
Connection	V1 connector(M12×1),4-pin
Material Housing	brass,nickel-plated
Transducer	epoxy resin/hollow glass sphere mixture;
	foam polyurethane,cover PBT
Weight	25g
Compliance with standards an	nd di
Standard conformity	EN 60947-5-2:2007

IEC 60947-5-2:2007



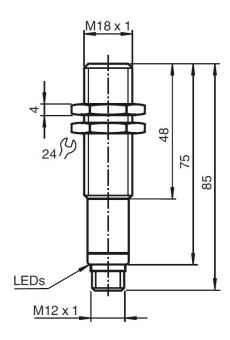

# Standard symbol/Connections: (version E4, npn)

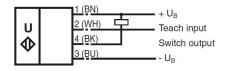

Core colours in accordance with EN 60947-5-2.

#### V1 Connector



## Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage -  $U_B$  or +  $U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s.LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with -  $U_B$ , A2 with + $U_B$ . Five different output functions can be set.

- 1. Window mode, normally-open function.
- 2. Window mode, normally-closed function.
- 3. One switching point, normally-open function
- 4. One switching point, normally-closed function.
- 5. Detection of objet presence.

Switching point, Setting distance only after power on. The internal clock can assure can't be changed after 5 mins when power on. If want to change the switching point, the user can only setting the request distance after power restart.

## TEACH-IN window mode, normally-open function

- -Set target to near switching point
- -TEACH-IN switching point A1 with U<sub>B</sub>
- -Set target to far switching point
- -TEACH-IN switching point A2 with + U<sub>B</sub>

## TEACH-IN window mode, normally-closed function

- -Set target to near switching point
- -TEACH-IN switching point A2 with + U<sub>B</sub>
- -Set target to far switching point
- -TEACH-IN switching point A1 with U<sub>B</sub>

# **TEACH-IN** switching point, normally-open function

- -Set target to near switching point
- -TEACH-IN switching point A2 with + U<sub>B</sub>
- -Cover sensor with hand or remove all objects from sensing range
- -TEACH-IN switching point A1 with UB

#### **TEACH-IN** switching point, normally-closed function


- -Set target to near switching point
- -TEACH-IN switching point A1 with U<sub>B</sub>
- -Cover sensor with hand or remove all objects from sensing range
- -TEACH-IN switching point A2 with + U<sub>B</sub>

## **TEACH-IN** detection of objects presence


- -Cover sensor with hand or remove all objects from sensing range
- -TEACH-IN switching point A1 with U<sub>B</sub>
- -TEACH-IN switching point A2 with + U<sub>B</sub>

## Default setting of switching point

A1=blind range,A2=nominal distance

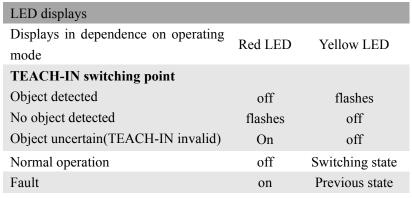


# Characteristic response curve

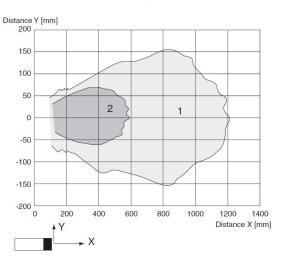

Curve1:flat surface 100mm×100mm

Curve2:round bar, Ф25mm

# Programmable output modes

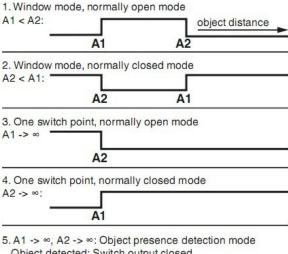

 A1 -> ∞, A2 -> ∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

## **Installation conditions**

If the sensor is installed at the environment temperature fall below  $0^{\circ}$ C, It should do well on the protective measures. In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread.